



MGC2 | LGC2 | DGC5

APPLICATION

This technical reference explains how to reset a Service Fault on an INTEC Controls gas detection system. The directions outlined in this document are only applicable for the products listed below.

The assembling, disassembling, repair, calibration, and other maintenance services should only be performed by a qualified and trained personnel.

CONDITIONS

The Fault LED is lit. A service phone number is displayed.

APPLIES TO...

MGC2, LGC2, or DGC5 models.

Alarm 1 Alarm 2 - n

INTEC

13.06.13 11:45am

Power Fault

Newer generation keypad

Fault Alarm

INTEC

Earlier generation keypad

Scroll down & up in Main menu and Sub menus; increases or decreases a value

Navigates through menus on the same level; moves cursor when inputting data

Escape; exits programming and saves settings or return to previous level or menu

Enter Sub menus or stores data; horn silence (if assigned)

PROCEDURES (13 Steps)

1. Press to enter menu; the system displays “System Errors”.
2. Use or until “System Setup” is shown.
3. Hit to enter “System Setup”.
4. Use or until “Next maint. date” is shown.
5. Hit , the system displays “Enter Password”.
6. Enter **9001** using the ARROW keys, then press . *(The system puts an underscore “_” under the second character of the scheduled maintenance date.)*
7. Use the ARROW keys to set the next appropriate maintenance date – mm.dd.yy. *(Factory recommends scheduling every 1 to 1.5 years.)* Press when done. *(The underscore “_” will disappear.)*
8. Hit , the system displays “System Setup”.
9. Use or until “System Errors” is shown.
10. Hit to enter “System Errors”. *(The phrase “Service!” is displayed.)*
11. Hit , the system displays “Service! Reset?”. *(If the password prompt appears again, enter 9001 using the arrow keys.)* Press to continue.
12. Hit until the system displays “Error Cleared”.
13. Hit until the system displays “INTEC”. *At this point the display scrolls through the active sensors (SP Points).*

Still need technical assistance?
Let's us know, we're here to help!



Phone: (858) 761-9324
 Fax: (858) 578-4633
 Web: inteccontrols.com
 Email: info@inteccontrols.com