



## SPC3 | MGC3 | DGC3

### APPLICATION

This technical reference explains how to reset a Service Fault on an INTEC Controls gas detection system. The directions outlined in this document are only applicable for the products listed below.

**The assembling, disassembling, repair, calibration, and other maintenance services should only be performed by a qualified and trained personnel.**

### APPLIES TO...

SPC3, MGC3 or DGC3 models.

### PROCEDURES (14 Steps)

<span style="color: orange;">●</span> <b>Alarm 1</b> "Orange LED"	Flashes when any stage level setpoint is exceeded; steady when any relay output is in manual override operation
<span style="color: red;">●</span> <b>Alarm 2</b> "Red LED"	Flashes when high alarm stage 2 or multiple alarm stage level setpoints are exceeded; steady when any relay output is in manual override operation
<span style="color: yellow;">●</span> <b>Failure</b> "Yellow LED"	Flashes when system or sensor fails
<span style="color: green;">●</span> <b>Power</b> "Green LED"	Steady when power is ON

- Exit programming mode and saves settings; return to previous level or menu
- Enter Main Menus; scrolls through Main Menus and Sub Menus; increase or decrease a value
- Navigates through menus on the same level; moves cursor when inputting data
- Enter Sub Menus; accepts and stores data; silence horn (if assigned)

1. Press to enter menu.
2. The system displays "SYSTEM ERRORS".
3. Use until "SYSTEM SETUP" is shown.
4. Hit to enter "SYSTEM SETUP".
5. Use until "MAINT AFTER DAYS" is shown.
6. Hit , the system displays "ENTER PASSWORD".
7. Enter **9001** using the ARROW keys, then press .  
*(The system displays "\_" under the "Maint After Reset?")*
8. Press to reset maintenance days. Display shows "912 DAYS DEFAULT VALUE".
9. Hit , the system displays "SYSTEM SETUP".
10. Use until "SYSTEM ERRORS" is shown.
11. Hit to enter "SERVICE ERRORS".  
*(The phrase "SERVICE ERROR" will be displayed.)*
12. Hit , the system displays "SERVICE Reset?".  
*(If the password prompt appears again, enter 9001 using the arrow keys.)*  
Press to continue.
13. Hit until the system displays "ERROR CLEARED".
14. Hit until the system displays "INTEC".  
*At this point the display scrolls through the active sensors (SP Points).*

Still need technical assistance?  
Lets us know, we're here to help!



Phone: (858) 761-9324  
 Fax: (858) 578-4633  
 Web: [inteccontrols.com](http://inteccontrols.com)  
 Email: [info@inteccontrols.com](mailto:info@inteccontrols.com)