

PolyGard[®] 2 DC6 Multi-Sensor-Controller

Controller for Analog and Digital Sensor Cartridges
Serial No.

User Manual

Version 19.06 2019 en

March 04, 2022 – *Revision*

- 1 Intended Use.....3**
- 2 Functional Description.....3**
 - 2.1 General.....3
 - 2.2 Function Outputs3
 - 2.3 Relay Mode4
 - 2.4 Relay Function Static / Flash4
 - 2.5 Horn Function (not safe output circuit because resettable).....4
- 3 Installation.....5**
 - 3.1 Mounting Instructions5
 - 3.2 Installation Work.....5
- 4 Electrical Connection.....6**
 - 4.1 Wiring6
 - 4.2 Wiring Diagrams.....7
- 5 Commissioning.....9**
 - 5.1 General Notes9
 - 5.2 Optical Check.....9
 - 5.3 Selection Gas Type with Unit9
- 6 Configuration and Parameter Cards10**
- 7 Inspection and Service13**
 - 7.1 Functional Tests (for Initial Operation and Maintenance).....13
 - 7.2 Trip Test with Reference Gas.....13
 - 7.3 Calibration14
- 8 Technical Data15**
- 9 Part Disposal.....16**
- 10 Notes and General Information.....16**
 - 12.1 Intended Product Application16
 - 12.2 Installers’ Responsibilities.....16
 - 12.3 Maintenance.....16
 - 12.4 Limited Warranty16

1 Intended Use

The PolyGard®2 DC6 is designed for detection and warning of toxic, combustibile or dangerous atmosphere in many commercial and industrial applications.

The intended sites are all areas being directly connected to the public low voltage supply, e.g. residential, commercial and industrial ranges as well as small enterprises (according to EN50 082).

The PolyGard®2 DC6 Multi Sensor Controller must not be used in potentially explosive atmospheres. The sensor must only be employed in areas within the environmental conditions specified in the Technical Data.

2 Functional Description

2.1 General

The Multi-Sensor-Controller is designed for the connection of max. three sensors, two of them may be different cartridges of the SC2 series via local bus and/or two of them analog sensors with 4-20 mA signal of the AT6 series. The function of the sensor series SC2 or AT6 is not the subject of this User Manual but can be found in the User Manual of the SC2 / AT6.

The controller monitors the measured values and activates the alarm relays if the set alarm thresholds for pre-alarm and main alert are exceeded. In addition, the values are provided for direct connection to the BMS via an RS-485 interface and also as 4-20 mA output.

The SIL 2 compliant self-monitoring function in the DC6 and in the connected Sensor Cartridge activates the fault message in case of an internal error as well as in case of a fault in the local bus communication (SC2) and/or at the 4-20 mA input / output current signals.

Other options such as LCD display, three-color status LED, buzzer, digital input for acknowledgment or test function, various communication protocols ensure proper adaptation to the wide range of applications in gas detection technology. For convenient commissioning the DC6 can be pre-configured and parametrised with factory-set defaults.

2.2 Function Outputs

SHORT DESCRIPTION OF THE FUNCTION: DIGITAL OUTPUTS WITH THREE RELAYS

Action	Reaction Relay 1 (Alarm1)	Reaction Relay 2 (Alarm2)	Reaction Warning light (Alarm 2)	Reaction Horn (Alarm 2)	Reaction Relay 3 (Alarm2 + fault)	Reaction LED
Sensor signal < alarm threshold 1	OFF	OFF	OFF	OFF	ON	GREEN
Sensor signal > alarm threshold 1	ON	OFF	OFF	OFF	OFF	RED
Sensor signal > alarm threshold 2	ON	ON	ON	ON	ON	RED
Sensor signal ≥ alarm threshold 2, but button Horn OFF activated	OFF		ON	OFF after delay ON		RED
Measuring signal < (alarm threshold 2 - hysteresis) but >= alarm threshold 1	ON	OFF	OFF	OFF	OFF	RED
No alarm, no fault	OFF	OFF	OFF	OFF	ON	GREEN
No fault, but maintenance due	OFF	OFF	OFF	OFF	ON	GREEN flashing
Internal error	OFF	OFF	ON	OFF	OFF	YELLOW

Note 1: Status OFF = Relay is configured “Alarm ON = Relay“ or the MSC is free from tension.

Note 2: Alarm thresholds can have the same value, therefore the relays and/or the horn and flashlight can be triggered together.

2.3 Relay Mode

Definition of the relay operation mode: The terms energized / de-energized come from the terms energized / de-energized to trip principle (open-circuit / closed circuit principle) used for safety circuits. The terms refer to the activation of the relay coil, not to the relay contacts (as they are executed as a changeover contact and available in both principles).

The LEDs attached to the modules show the two states in analogy. (LED off -> relay de-energized)

2.4 Relay Function Static / Flash

Definition of the relay function: The function "flashing" represents a connection option for warning devices to improve visibility. If "flashing" is set, this must not be used as a safe output circuit any more.


A combination of relay mode energized with flashing operation makes no sense and is therefore suppressed.

2.5 Horn Function (not safe output circuit because resettable)

The horn function is considered active if at least one of the two parameters (time or assignment to digital input) is set. The horn function retains its functionality even for alarms in latching mode.

Special function: Recurrence of the horn relay

After an alarm has been triggered, the horn will remain active until it is acknowledged. After acknowledgment of the horn relay/s (clicking a button or via external input) a timer starts. When this time has run out and the alarm is still acting, the relay is set again. This process is repeated endlessly as long as the associated alarm remains active.

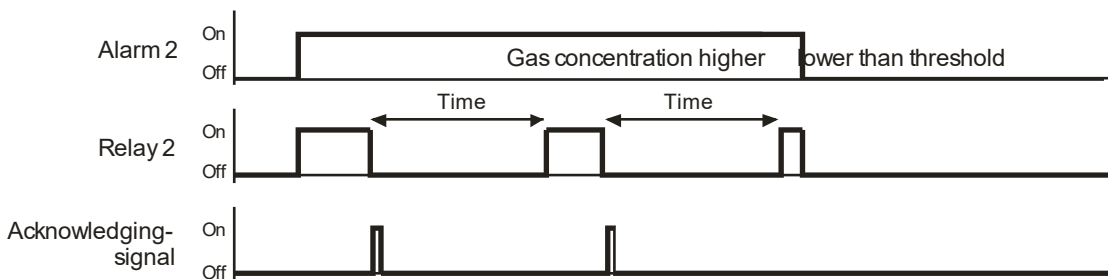

3 Installation



Electronics can be destroyed by electrostatic discharge (ESD). Therefore, the installation work should be done only by persons connected to ground, e. g. with a wrist strap connected to ground or by standing on a conductive floor (acc. to DIN EN 100015).

3.1 Mounting Instructions

When choosing the mounting site please pay attention to the following:

- The mounting height depends on the relative density of the gas type to be monitored (see User Manual of Sensor Cartridge).
- Choose mounting location of the sensor according to the local regulations.
- Consider ventilation conditions! Do not mount the sensor near the airflow (air passages, suction holes etc.).
- Mount the sensor at a location with minimum vibration and minimum variation in temperature (avoid direct sunlight).
- Avoid locations where water, oil etc. may influence proper operation and where mechanical damage might be possible.
- Provide adequate space around the sensor for maintenance and calibration work.
- Observe possible constructor's instructions.

3.2 Installation Work




Assembly work must only be carried out under gas-free conditions.

The housing must neither be spot-drilled nor drilled through outside the knockouts.

The installation position of the gas detector is always with the sensor head downwards.

- Open housing cover.
- Break out the required pre-embossed knockouts on the housing for cable glands and Sensor Cartridge.
- Cables are introduced from above, the sensor head SC2 / AT6 downwards.
- The DC6 Controller is fixed to the wall through the four marked mounting points at the back side of the housing. These mounting points are accessible after opening the housing. See figure below.
- The dimensions XX depend on the type and can be read on the back of the housing, in the housing version of CX, it is 115 mm.
- The mounting points are covered by closing the cover at the end of the assembly.
- Close the cover.

Installation of Controller:

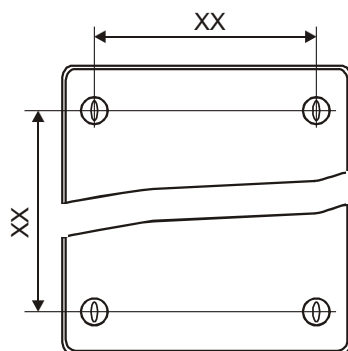

4 Electrical Connection



Assembly work must only be carried out under gas-free conditions!
Consider static electricity instructions (ESD)!

4.1 Wiring

- The technical requirements and regulations for wiring, electrical security, as well as project specific and environmental and local conditions etc. must be observed when mounting.
- We recommend the following cable types¹:

	Europe	USA / Canada
Power supply 230 V	NYM-J 3 x 1.5 mm ²	14 AWG / 300 V
Alarm message 230 V (also possible together with power supply)	NYM-J X x 1.5 mm ²	14 AWG / 300 V
Signal message, bus connection to DGC6, warning devices 24 V	J-Y(St)Y 2x2 x 0.8 mm ²	min. 300 V
Possibly connected external analog transmitters	J-Y(St)Y 2x2 x 0.8 mm ²	min. 300 V

¹ The recommendation does not consider local conditions such as fire protection etc.

- Use copper conductors only for the terminal is only for connection to copper wire.
- Avoid any influence of external interferences by using shielded cables for the bus line, but do not connect the shield.
- Strip the cables as short as possible. It is important to ensure that bare wires, e.g. wire shields, do not come into contact with the mounted PCB (risk of short-circuit).
- Low voltage wire and mains connected wire must be fixed separately by cable ties or similar, to secure against looseness.
- When choosing the option “Power Supply ≥ 90 VAC” you must make sure that a switch or a circuit breaker is provided in the building automation especially for the Unit. It must be installed easily accessible near the Unit. It has to be marked as a disconnecting device for the Unit and shall meet the relevant requirements of UL/IEC 60947 and UL/IEC 60947-3
- Analog sensors are connected directly to the spring type terminals of the module. The correct polarity must be observed.
- Digital sensors are connected directly to the local bus socket.
- The alarm signals are available as potential-free change-over contacts.



The exact position of the terminals for the sensors and alarm relays is shown in the connection diagrams.

PG2 NETWORK CABLE RECOMMENDATION for RS-485 Com Link & 24 VDC Power Trunk/Bus:

Connect Air #W202P-2288INTEC Cable or equivalent recommended; 20 AWG, 4-conductor, one shielded twisted pair (for comm), all wires different colors


4.2 Wiring Diagrams

DC6 Sensor Board

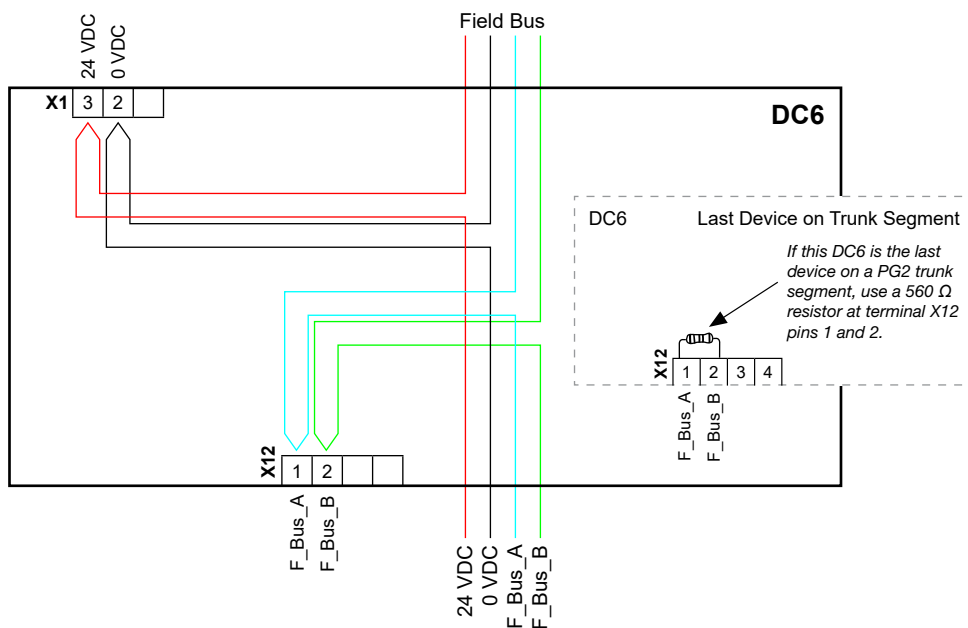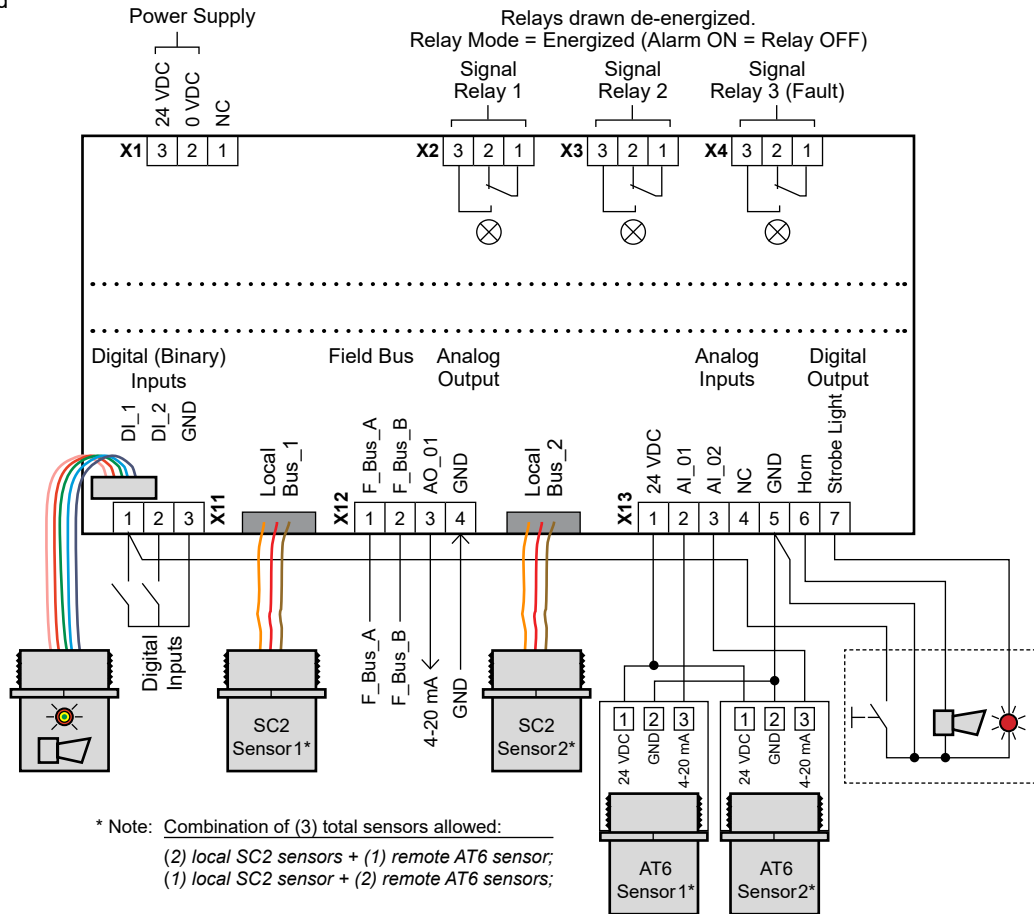

DIMENSIONS

inches (mm)

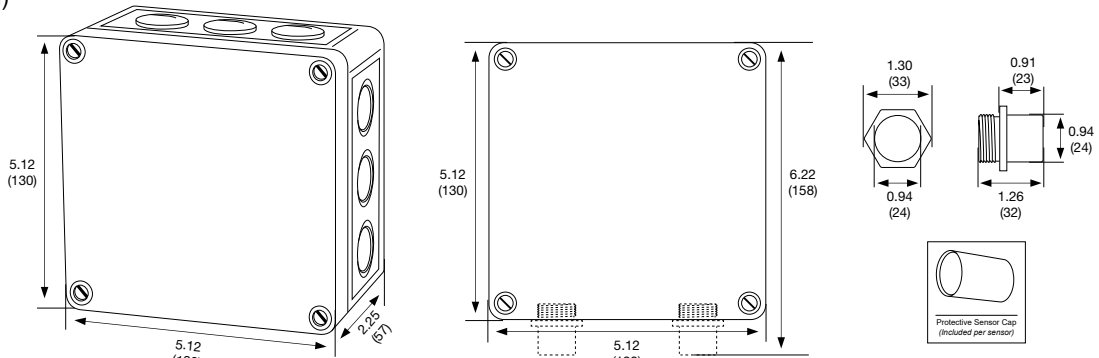

Sensor modules are shipped with red protective cap. Remove cap to place sensor into service. Re-install cap to protect sensor from construction dust, power-washing or other excessive dirt/moisture.

Short Description of the Function: Digital Outputs With Three Relays


Action	Reaction Relay 1 (Alarm 1)	Reaction Relay 2 (Alarm 2)	Reaction Strobe Light (Alarm 2)	Reaction Horn (Alarm 2)	Reaction Relay 3 (Alarm 2 + fault)	Reaction LED
Gas signal < alarm threshold 1	OFF	OFF	OFF	OFF	ON	GREEN
Gas signal > alarm threshold 1	ON	OFF	OFF	OFF	OFF	RED
Gas signal > alarm threshold 2	ON	ON	ON	ON	ON	RED
Gas signal ≥ alarm threshold 2, but button Horn OFF activated	OFF		ON	OFF after delay ON		RED
Gas signal < (alarm threshold 2 - hysteresis) but ≥ alarm threshold 1	ON	OFF	OFF	OFF	OFF	RED
No alarm, no fault	OFF	OFF	OFF	OFF	ON	GREEN
No fault, but service due	OFF	OFF	OFF	OFF	ON	GREEN (flashing)
Internal error	OFF	OFF	ON	OFF	OFF	YELLOW

Note 1: Status OFF = Relay is configured "Alarm ON = Relay" or in the event of a power failure.

Note 2: Alarm thresholds can have the same value, therefore the relays and/or the horn and strobe can be triggered together.

SENSOR BOARD COMPONENTS

DC6 Sensor Board

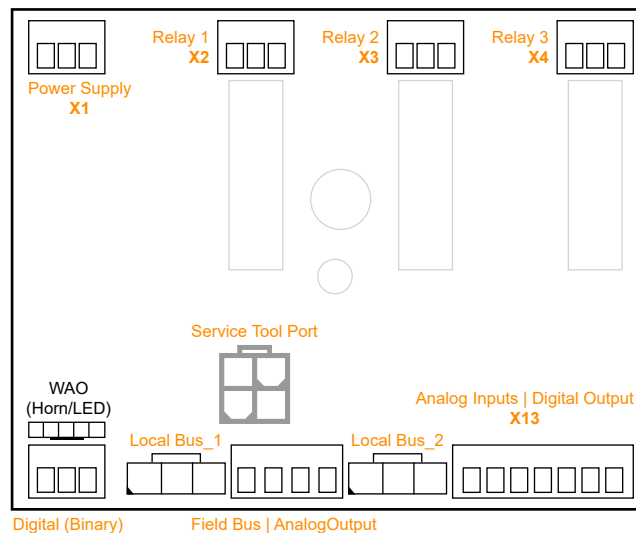

5 Commissioning

5.1 General Notes

Only trained technicians should perform the following when commissioning:

- Install the Sensor Cartridge(s) if not already installed.
- Check for correct mounting location.
- Check if connection is correct according to connection diagram.
- Check power voltage.
- Calibrate (if not already factory-calibrated).

Required instruments for commissioning (calibration):

- Service Tool STL6 or
- DPT6 incl. EasyConfig Software and USB/RS-485 communication set
- See document ***PolyGard®2 Sensor Calibration Procedure***

For sensors that e.g. can be poisoned by silicones like all semiconductor and catalytic bead sensors, it is imperative to remove the protective cap supplied only after all silicones are dry, and then energize the device.

For fast and comfortable commissioning, we recommend proceeding as follows. For digital devices with self-monitoring all internal errors are visible via the LED. All other error sources often have their origins in the field, because it is here where most of the causes for problems in the field bus communication appear.

5.2 Optical Check

- Right cable type used.
- Correct mounting height according to definition in Mounting.
- LED status

5.3 Selection Gas Type with Unit

The selection of the desired and connected gas sensor type is made by pre-set values.

If other gas sensor types are connected, you have to adjust them with the configuration tool, because otherwise the device will respond with an error message.

The selection contains all necessary information for the controller and is also used for comparing the real digital data with the settings.

This feature increases the user and operating security. There is an entry available per gas type for each unit; at the moment, there are 100 selection options.

6 Configuration and Parameter Cards

Address

Input Configuration				
Sensor No.	Bus/Analog	Active	Gas Type	Measuring Range
SP1	<input type="text"/>	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
SP2	<input type="text"/>	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>
SP3	<input type="text"/>	<input type="checkbox"/>	<input type="text"/>	<input type="text"/>

Sensor Point Parameters

SP1 Parameters

Active*/Inactive Gas Type

Unlock*/Lock Measuring Range

Parameter for The Central Processing of The Measured Value

Threshold 1	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 2	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 3	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 4	<input type="text"/>	<input type="checkbox"/>	CV
Hysteresis	<input type="text"/>		
CV ON-Delay Time [sec.]	<input type="text"/>	0	
CV OFF-Delay Time [sec.]	<input type="text"/>	0	

Analog Output Assignment 1

Alarm/Fault/Latching -> Assignment	Relay	Fault	Latching
Alarm 1	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 2	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 3	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 4	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>

SP2 Parameters

Active*/Inactive Gas Type

Unlock*/Lock Measuring Range

Parameter for The Central Processing of The Measured Value

Threshold 1	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 2	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 3	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 4	<input type="text"/>	<input type="checkbox"/>	CV
Hysteresis	<input type="text"/>		
CV ON-Delay Time [sec.]	<input type="text"/>	0	
CV OFF-Delay Time [sec.]	<input type="text"/>	0	

Analog Output Assignment 1

Alarm/Fault/Latching -> Assignment	Relay	Fault	Latching
Alarm 1	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 2	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 3	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 4	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>

SP3 Parameters

Active*/Inactive Gas Type

Unlock*/Lock Measuring Range

Parameter for The Central Processing of The Measured Value

Threshold 1	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 2	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 3	<input type="text"/>	<input type="checkbox"/>	CV
Threshold 4	<input type="text"/>	<input type="checkbox"/>	CV
Hysteresis	<input type="text"/>		
CV ON-Delay Time [sec.]	<input type="text"/>	0	
CV OFF-Delay Time [sec.]	<input type="text"/>	0	

Analog Output Assignment 1

Alarm/Fault/Latching -> Assignment	Relay	Fault	Latching
Alarm 1	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 2	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 3	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>
Alarm 4	SR <input type="text"/>	<input type="checkbox"/>	<input type="checkbox"/>

* Default value/selection

Signal Relay Parameters

R1 Parameters			
<input type="button" value="Used*/Unused"/>	Stage Trigger Quantity	<input type="text"/>	
<input type="button" value="Energize*/De-En."/>	Manual ON via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Static*/Flash"/>	Manual OFF via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Local*/Remote"/>	Delay On Time [sec.]	<input type="text"/>	
	Delay Off Time [sec.]	<input type="text"/>	
	Activate by Failure	<input type="button" value="OFF*/ON"/>	
		Horn Functions <input type="button" value="Automatic Reset"/>	
		Automatic Reset Time [sec.]	<input type="text"/>
		Reset via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>
		Activate by Maintenance	<input type="button" value="OFF*/ON"/>

R2 Parameters			
<input type="button" value="Used*/Unused"/>	Stage Trigger Quantity	<input type="text"/>	
<input type="button" value="Energize*/De-En."/>	Manual ON via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Static*/Flash"/>	Manual OFF via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Local*/Remote"/>	Delay On Time [sec.]	<input type="text"/>	
	Delay Off Time [sec.]	<input type="text"/>	
	Activate by Failure	<input type="button" value="OFF*/ON"/>	
		Horn Functions <input type="button" value="Automatic Reset"/>	
		Automatic Reset Time [sec.]	<input type="text"/>
		Reset via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>
		Activate by Maintenance	<input type="button" value="OFF*/ON"/>

R3 Parameters			
<input type="button" value="Used*/Unused"/>	Stage Trigger Quantity	<input type="text"/>	
<input type="button" value="Energize*/De-En."/>	Manual ON via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Static*/Flash"/>	Manual OFF via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>	
<input type="button" value="Local*/Remote"/>	Delay On Time [sec.]	<input type="text"/>	
	Delay Off Time [sec.]	<input type="text"/>	
	Activate by Failure	<input type="button" value="OFF*/ON"/>	
		Horn Functions <input type="button" value="Automatic Reset"/>	
		Automatic Reset Time [sec.]	<input type="text"/>
		Reset via Dig. Inp.	<input type="button" value="BI"/> <input type="text"/>
		Activate by Maintenance	<input type="button" value="OFF*/ON"/>

* Default value/selection

Information Serial Number <input style="width: 150px;" type="text"/> Date of Production <input style="width: 150px;" type="text"/>	Address <input style="width: 100px;" type="text" value="SB/PX/MSx"/> <input style="width: 100px;" type="text"/>
--	--

System Parameters AI Maintenance Interval [days] <input style="width: 80px;" type="text"/> Average Value Overlay Time [sec.] <input style="width: 80px;" type="text"/> Average Value Overlay Data [ppm] <input style="width: 80px;" type="text"/> Average value time [sec.] <input style="width: 80px;" type="text"/> Power on time [sec.] <input style="width: 80px;" type="text"/>	Error Time [sec.] <input style="width: 80px;" type="text"/> <div style="display: flex; justify-content: space-around;"> <div style="border: 1px solid black; padding: 2px;">Analog Outputs</div> <div style="border: 1px solid black; padding: 2px;">Relay Multiplication</div> </div>
--	---

Analog Outputs			
Analog Output 01	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 02	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 03	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 04	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 05	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 06	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 07	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 08	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 09	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 10	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 11	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 12	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 13	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 14	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 15	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.
Analog Output 16	<input style="width: 40px;" type="text"/>	%	<input style="width: 40px;" type="text"/> CV/AV <input style="width: 40px;" type="text"/> max./avg./min.

Relay Multiplication				
	PR/SR	IN	PR/SR	OUT
01				
02				
03				
04				
05				
06				
07				
08				
09				
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				

* Default value/selection

7 Inspection and Service

For regular maintenance und calibration by trained technicians we recommend concluding a service contract with INTEC Controls or one of their authorized partners.

According to EN 45544-4, inspection and service must be executed at regular intervals. The maximum intervals have to be determined and observed by the person responsible for the gas warning system according to the legal requirements. INTEC Controls recommends applying the inspection and maintenance intervals as prescribed in the general regulations of the gas measuring technique like VDI-2053, EN 60079-29-1 etc. The inspection interval normally is three months. The recommended service intervals are depended from the connected Sensor Cartridges. If different intervals are valid, always consider the shortest one.

Inspections and services must be documented. The date for the next maintenance has to be affixed to the sensor.

7.1 Functional Tests (for Initial Operation and Maintenance)

Gas sensors should be controlled regularly by a competent person according to EN 45544-4. The functional test should be carried out during each service, but at least once a year. The following has to be checked in particular:

- Maintenance / calibration interval not exceeded.
- Check the Unit including measuring head for mechanical damage.
- Remove dust deposits, especially at the gas inlet.
- Check the Unit including measuring head for dust, dirt and moisture deposits and clean it with a dry cloth if necessary.
- The filter at the gas inlet has to be replaced if extremely dirty.

7.2 Trip Test with Reference Gas

When applying a reference gas with a concentration > alarm threshold 2, the set alarm thresholds are exceeded, and all output functions are activated. It is necessary to check if the connected output functions are working correctly (e.g. the horn sounds, the fan switches on, devices shut down). By pressing the push-button on the horn, the horn acknowledgment must be checked. After removal of the reference gas, all outputs must automatically return to its initial position.

7.3 Calibration

New SC2 / AT6 Sensor are always delivered factory-calibrated. This is documented by the calibration label indicating date and calibration gas. A repeated calibration is not necessary during commissioning if the device is still in its original packaging (air-tight protection by the red protective cap) and the calibration doesn't date back more than 12 months for CO2 sensors and 3 months for all other gases.

The calibration of the sensor head is done on the display; for versions without display, you need a PC tool or the STL6 Service Tool. There is an automatic routine in the calibration menu of the Service Tool STL.

As long as the calibration menu is open and the sensor is gassed with test gas, the alarm release is blocked.

Prior to calibration the sensor must be connected continuously to the power supply for stabilization for a running-in period (see User Manual of Sensor Cartridge).

8 Technical Data

SPECIFICATIONS

Electrical

Power supply	24 VDC, polarity protected
Power consumption	24 VDC
- base	55 mA
- sensors	See SC2 datasheet
- horn & multi-status LED	5 mA, max.
- analog output	22 mA
Signal relays	Three (3), 250 VAC, 5 A, potential-free, contacts (SPDT); 2 programmable & 1 fault; programmability is determined by the number of connected sensors
Transistor output	Two (2), 24 VDC / 0.1 A (switching to plus)
Digital inputs	Two (2), potential-free
Analog inputs	Two (2), 4-20 mA overload and short-circuit proof, input resistance 200 Ω
Analog output signal	One (1), proportional, overload and short-circuit proof, load ≤ 500 Ω 4-20 mA = measuring range; 3.0 < 4 mA = under range; > 20-21.2 mA = over range; 2.0 mA = fault
Output for local bus	5 VDC, 250 mA max. Overload, short-circuit and polarity protected
Output signal for serial communication	Digital, RS-485, proprietary DGC6 protocol, 19200 baud

Sensor Performance

Sensor coverage	See SC2 datasheet for specific gases
Storage time	6 months (for sensor elements)

Environmental

Permissible ambient	See SC2 datasheet for specific gases
---------------------	--------------------------------------

Serial Interface

- local bus	1-wire / 19200 Baud
- field bus	RS-485 / 19200 Baud
- tool bus	2-wire / 19200 Baud

Physical

Enclosure "C", standard	
- material	Polycarbonate, UL94 V-2, fire retardant
- color	Light gray
- protection	NEMA 4X (IP65)
- installation	Wall (surface) mounted, or single gang electrical box
Dimensions (H x W x D)	
- base unit	5.12 x 5.12 x 2.95 in (130 x 130 x 75 mm)

Weight	1.32 lb (0.6 kg)
Cable entry, knock outs	3 holes for 1/2 in. conduit, closed with silver "plugs"
Wire connection	
- local bus (SC2)	3-pin connector
- digital input & analog output	Screw-type terminal; 24 AWG (0.25 mm ²), min. 16 AWG (1.3 mm ²), max.
- power supply, relays	Screw-type terminal; 24 AWG (0.25 mm ²), min. 14 AWG (2.5 mm ²), max.
Weight	1.32 lb (0.6 kg)
Conforms to	EMC Directive 2014/30/EU Low Voltage Directive 2014/35/EU CE EN 50271 EN 61508 EN 60079-29-1 EN 61010-1:2010 ANSI/UL 61010-1 CAN/CSA-C22.2 No. 61010-1 City of Los Angeles
Warranty	Two years material and workmanship, 12 months normal exposure for sensor element

9 Part Disposal

Since August 2005 there are EC-wide directives defined in the EC Directive 2002/96/EC and in national codes concerning the waste electrical and electronic equipment and also regarding this device.

For private households there are special collecting and recycling possibilities. For this device isn't registered for the use in private households, it mustn't be disposed this way. You can send it back to your national sales organisation for disposal. If there are any questions concerning disposal please contact your national sales organisation.

Outside the EC, you have to consider the corresponding directives.

10 Notes and General Information

It is important to read this user manual thoroughly and clearly in order to understand the information and instructions. The PolyGard®2 devices must be used within product specification capabilities. The appropriate operating and maintenance instructions and recommendations must be followed.

Due to on-going product development, INTEC Controls reserves the right to change specifications without notice. The information contained herein is based upon data considered to be accurate. However, no guarantee is expressed or implied regarding the accuracy of these data.

10.1 Intended Product Application

The PolyGard®2 devices are designed and manufactured for control applications and air quality compliance in commercial buildings and manufacturing plants.

10.2 Installers' Responsibilities

It is the installer's responsibility to ensure that all PolyGard®2 devices are installed in compliance with all national and local codes and OSHA requirements. Installation should be implemented only by technicians familiar with proper installation techniques and with codes, standards and proper safety procedures for control installations and the latest edition of the National Electrical Code (ANSI/NFPA70).

The equipotential bonding required (also e.g. secondary potential to earth) or grounding measures must be carried out in accordance with the respective project requirements. It is important to ensure that no ground loops are formed to avoid unwanted interference in the electronic measuring equipment.

It is also essential to follow strictly all instructions as provided in the user manual.

10.3 Maintenance

It is recommended checking the PolyGard®2 device regularly. Due to regular maintenance any performance deviations may easily be corrected. Re-calibration and part replacement in the field may be implemented by a qualified technician and with the appropriate tools. Alternatively, the easily removable plug-in Sensor Cartridge with the sensor element may be returned for service to INTEC Controls.

10.4 Limited Warranty

INTEC Controls warrants the PolyGard®2 devices for a period of two (2) years from the date of shipment against defects in material or workmanship; 12 months for sensor elements operating within normal exposures. Should any evidence of defects in material or workmanship occur during the warranty period, INTEC Controls will repair or replace the product at their own discretion, without charge. A pre-authorized RMA number is required for returns.

This warranty does not apply to units that have been altered, had attempted repair, or been subject to abuse, accidental or otherwise. The warranty also does not apply to units in which the sensor element has been overexposed or gas poisoned. The above warranty is in lieu of all other express warranties, obligations or liabilities.

This warranty applies only to the PolyGard®2 devices. INTEC Controls shall not be liable for any incidental or consequential damages arising out of or related to the use of the PolyGard®2 devices.